



At the heart of perfect systems
www.reitzindia.com



**STORAGE, ERECTION, OPERATION
AND MAINTENANCE MANUAL FOR
CENTRIFUGAL FANS**

MODEL - MAE

CUSTOMER :

CONTENTS

1	SAFETY	7
	1.1 General	8
	1.2 Description of symbols and pictograms	8
	1.3 Start - up	8
	1.4 Servicing	9
	1.5 Cleaning	9
	1.6 Electrical Safety	9
	1.7 Description of labels and plates	10
2	APPLICATION	11
	2.1 Design conditions	11
	2.2 Warranty	11
3	DESCRIPTION	11
	3.1 Design	11
	3.2 Options	12
4	ASSEMBLY AND INSTALLATION	12
	4.1 Scope of supplies	12
	4.2 Transport	12
	4.3.1 Storage	13
	4.3.2 Stand - by operation	13
	4.4 Installation site	13
	4.5 Pipes connected to the fan	13
	4.6 Electrical connection	13
	4.7 Inspection	14
	4.7.1 Mechanical testing	14
	4.7.2 Electrical testing	14
5	START-UP	15
	5.1 Putting the fan into operation	15
	5.2 Putting the fan out of operation	15
	5.3 Transient behaviour	16
	5.3.1 General	16
	5.3.2 Direct starting	16
	5.3.3 Star-delta starting	16
6.	CARE AND MAINTENANCE	17
	6.1 Lubrication	17
	6.1.1 Drive motor	17
	6.2 Troubleshooting	18
	6.4 Queries/spare parts order	20



FAN DESCRIPTION

CUSTOMER :

CONSULTANT :

PO. NO. & DATE :

JOB ORDER NO :

FAN MODEL NO :

APPLICATION :

VOLUME :

STATIC PRESSURE :

TOTAL PRESSURE :

TEMPERATURE :

GENERAL ARRANGEMENT DRG NO. :

SAFETY PRECAUTIONS

The operation and maintenance of machinery of any kind requires a person to be cautious and aware of the damages that exist. In order to avoid injuries to personal and damage to machinery, the following precautions are necessary.

1. Never apply power to the fan motor for any reason until the fan has been completely installed in its system, and the system inspected to be sure that no debris has been left in the fan and ducts, and it is known that the inspection doors at the inlet and outlet of the air passages are closed. The usual procedure is to remove the fuses from the disconnect switch and open its safety isolation switch until the installation is completed and fully inspected.
2. Start the fan momentarily and disconnect it. Observe rotation of wheel and make sure that the drive rotation is correct. Do not allow the fan to run backward, except only momentarily.
3. Do not open or access inspection doors while the fan is running.
4. Always open the disconnect switch and lockit in the open position with a padlock before doing any service or maintenance work on the fan.
5. After service of any kind make certain that all adjustments have been properly made and tightened, inspection doors closed, there is no debris in the air passages and all tools have been removed before unlocking the disconnect switch to place the fan in operation.
6. Make a periodic inspection of the fan wheel, to be sure that corrosion has not set in to weaken them. Where there are signs of corrosion there is danger is danger of mechanical failure. Corroded parts should be replaced.
7. Always use caution in every maintenance or operational procedure.

1.1 GENERAL

The fan meets the technical safety standards applicable at the time of delivery. The rules and regulations for the prevention of accidents applicable at the time of delivery were taken into account in the fan design.

It is not allowed to modify the original condition of the fan without the approval of Reitz. The warranty expires when parts other than original Reitz spare parts and/or purchased parts not corresponding to the original parts are used.

The operating manual and any required supplementary manuals must be available to the operator.

It must be ensured that fans which are installed at high levels can only be reached via means of access especially installed for this purpose.

All devices and installations provided to prevent noxious substances from escaping must be checked before the fan is put into operation.



Do not bypass, loosen or remove guards and protective devices.

Do not open inspection ports and/or other openings when the fan is in operation.

1.2 Description of symbols and pictograms



This symbol draws your attention to dangerous situations. The operation concerned may endanger persons and cause injuries.



This symbol is used to indicate that the work must be carried out by a trained and qualified electrician.



This symbol is followed by supplementary information.

1.3 Start-up

The fan may only be put into operation (also for testing) when the inlet and outlet ports are provided with suitable guards/plate shutters or when pipes are connected to them.

Before the fan is started the housing and all pipes connected to it must be checked. They must be dry and free of screws, bolts ,tools and other foreign substances.



Disregarding the above instructions may cause accidents and destroy the fan.

Observe the safety regulations for electrical machines and equipment.

(□ Electrical safety)

1.4 Servicing

The fan may only be serviced when the electrical system is dead, i.e.;

- turn off the electrical machines and ensure that they cannot be switched on again.
- wait until the rotor has come to a standstill,
- remove the motor fuse,
- disconnect the power supply cable for the motor.

After servicing all guards and protective devices must be installed and all pipes must be connected again. All bolts and nuts must be tightened. Close all inspection openings and tighten the bolts and nuts.

The fan can then be put into operation again.

1.5 Cleaning

Do not clean moving parts when the fan is in operation !

Before cleaning the fan must be put out of operation. Ensure that the fan cannot be switched on again accidentally.

Only use suitable detergents and cleaning materials.
Remove any dirt wiped off the impeller and fan housing.



If material is sticking to the impeller or the impeller is worn, the fan may be seriously damaged by unbalance. It is therefore recommended to clean and check the fan for unusual vibrations at regular intervals.

1.6 Electrical safety


The user has to ensure that the fan is only connected and serviced by a qualified electrician in accordance with the rules and regulations applying to electrical equipment.

The user must also ensure that the fan is operated in accordance with electro-technical rules and regulations.

Do not touch/work on live parts.

- Interrupt the power supply to the fan and use mechanical means to ensure that power supply cannot be switched on again.
- Use a voltage tester to check that the circuit is dead.
Connect and short the work site to earth.
- Only use the fuses indicated in the electric circuit diagram.
- Check the condition of the visible cables before the fan is started.
- Replace damaged cables.


Damaged and/or defective electrical equipment must be repaired or replaced immediately. If the damaged equipment represents a risk, the fan may not be put into operation before the defect is repaired.

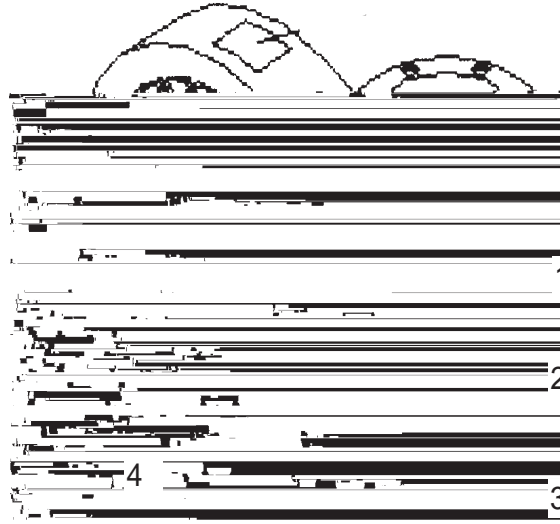

1.7 Description of labels and plates


The following plates are attached to the fan:

1. Nameplate
The nameplate indicates


REITZ INDIA LTD.			
HYDERABAD - INDIA			
CUSTOMER :	[REDACTED]		
FAN MODEL # :	[REDACTED]		
JOB ORDER # :	[REDACTED]	TAG# :	[REDACTED]
YEAR OF MFR. :	[REDACTED]	CONSULTANT# :	[REDACTED]
DENSITY :	[REDACTED] KG/m³	MEDIUM :	[REDACTED]
FLOW RATE :	[REDACTED] M³/HR	ST. PRES. :	[REDACTED] MMWG
TEMPERATURE :	[REDACTED] °C	SPEED :	[REDACTED] RPM

 2. Arrow showing the sense of rotation of the impeller.
3. Company Logo
4. Motor nameplate







 For special designs please note the information provided on the General Arrangement drawing of the fan.

3.2 Options

The shaft exit is covered with the motor flange.

From a temperature $>80^{\circ}\text{C}$ a cooling disk is mounted on the motor shaft. The motor flange then sits on spacer sleeves. The shaft is sealed inside the housing.

4. ASSEMBLY AND INSTALLATION

4.1 Scope of supplies

When delivered the fan and accessories must be checked for damage caused by damaged packing.


Immediately report any transport damage to the forwarding agent, insurance company and manufacturer. Any claims on transportation damages is not entertained by the fan supplier.

Check that everything indicated on the delivery note has been delivered.

In all other respects please refer to our terms and conditions for sales and delivery.

4.2 Transport


Only transport the fan with transport facilities which are appropriate for the conditions on the site where the fan is to be installed.

 Observe the applicable rules and regulations for the prevention of accidents.

For lifting and transporting the fan only ropes and/ or fork lift trucks with a sufficient lifting capacity may be used.

Only attach ropes to the fastening plates (1) especially provided for lifting the fan.

 Do not sling lifting ropes to the inlet/outlet ports or motor.

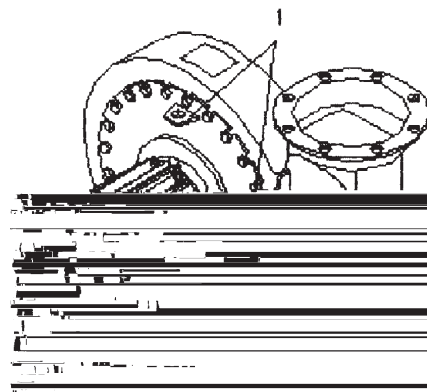

Warranty claims or claims for compensation for any damage caused by the use of unsuitable means of transport or caused by improper handling will not be accepted

4.3.1 Storage

If the fan is not installed and / or put into operation immediately it must be stored in a dry place which is free of vibrations.

In case of long-term storage please note the storage and preservation instructions for motors.

4.3.2 Stand-by operation

In case of prolonged standstill periods please note the relevant instructions for the storage of motors.

4.4 Installation site

The installation site must be level and have a sufficient load bearing capacity. There must be enough room for assembly and maintenance work. The impeller must be easily accessible.

If the fan is directly mounted on machine components (separators, filters...), the seat must be stiff enough to avoid vibrations.

4.5 Pipes connected to the fan



When attaching the pipes to the fan care must be taken that the fan is not distorted.

- Remove the transport shutters from the connection ports.
- Install the pipes in a manner ensuring that they are exactly aligned with the inlet and outlet ports of the fan.
- Connect the pipes with flexible couplings (compensators) to the inlet and outlet ports of the fan (optional).
- Install a baffle in the suction line (inlet side) to prevent contractions (underpressure).
- Check if the baffle has to be installed on the pressure (outlet) side.

4.6 Electrical connection



The fan may only be connected up to the electrical system by a qualified electrician. The drive motors are usually installed in the manufacturing works. The works warranty does not apply if the customer installs the motor.

(□ Chap. Electrical safety)

If the fan is not put into operation immediately after it has been assembled and installed, it must be secured against unauthorized use and covered with a tarpaulin.

5. START-UP

5.1 Putting the fan into operation



The fan may only be put into operation by qualified and skilled staff. Before the fan is put into operation the staff must check that the fan is in good working order.

The rules and regulations for putting electrical machines into operation must be observed.

- Check the safety systems.
- Close the choking elements (if provided).
- Switch on the master controller.
- Switch on the fan.




The fan may only be switched on when the pipes are connected and when it is certain that there will be a sufficient plant resistance after the fan motor has reached its full operating speed.

- Check the sense of rotation of the motor when the fan is started up for the first time (the fan must rotate in the direction indicated by the arrow).
- Check the power consumption. The maximum permissible power consumption must not be exceeded.

5.2. Putting the fan out of operation

- Switch off the fan.
- Turn master controller to "OFF" and secure it against unauthorized use.

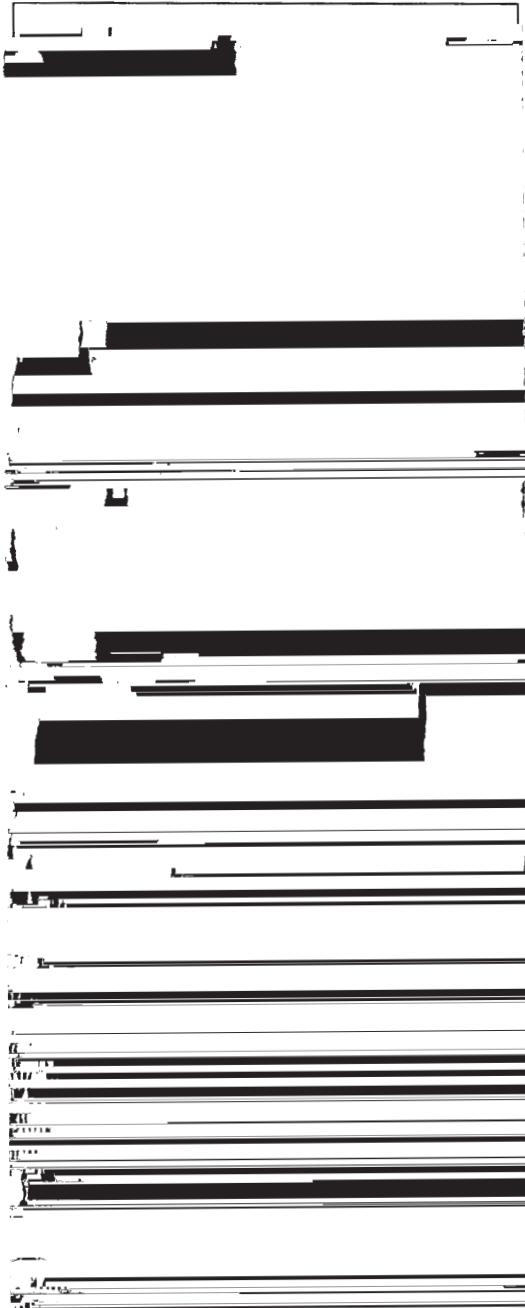

5.3. Transient behaviour

5.3.1 General



The fan can only be started when a sufficiently high moment of acceleration is available from the moment when the **nominal speed** is reached.

It is recommended to start the fan with the choking element closed.



The customer has to check that his power network, switchgear, monitoring devices (if available) and cable cross sections are dimensioned to cope with the transient behaviour and current peaks.

5.3.2 Direct starting

Direct starting of the fan motor not only causes a high starting torque but also a high starting current.

During start-up the starting current may be 6 to 8 times as high as the nominal current (depending on the type of rotor).

This high power input must be taken into account when the fuse sizes are determined.

5.3.3 Star-delta starting

During star-delta starting the drive motor only provides for 1/3 of the starting torque in the star connection. At a certain starting speed the load moment of the fan exceeds the starting torque of the motor. The motor does not accelerate. At this point the motor has to be changed over to the delta connection. The current peak which is then obtained is clearly lower than the one occurring during direct starting.



6. CARE AND MAINTENANCE

6.1 Lubrication



The fan must be checked at regular intervals (depending on the operating conditions).

6.1.1 Drive motor

The motor must be serviced in accordance with the motor's lubricating instructions.

6.2 Troubleshooting

Malfunction	Possible cause	Action
Unsteady operation of fan.	Material sticking to impeller blades.	Carefully clean impeller.
	Worn impeller.	Replace impeller.
	Impeller deformed by heat.	Replace impeller.
	Strain exerted by connected pipes.	Use flexible pipe connections (compensators).
Well fluid escapes at the Motor flange.	Motor seal broken.	Check motor seal and replace it, if required.
Fan produces a grinding noise.	Impeller rubs against nozzle.	Loosen housing cover and inlet re-align, check and correct pipe if necessary.
	Motor noise.	Check if bearings are damaged and replace bearings if necessary.
The power input indicated on the rating plate is constantly exceeded.	Air volume too much.	Reduce air volume using a choking element until the permissible power input is reached.
	Excessive material quantity (Kg/h).	Reduce material quantity.
	Different speed with 60 Hz	Check frequency.
Fan does not accelerate.	Improper connection of drive motor.	Check connection.
	Motor does not change from star to delta connection.	Shorten change-over time from star to delta.
	Fan operates against insufficient plant resistance.	Close choking elements or install additional plate shutters.
	Motor protection system is not strong enough.	Cable cross section and protective system must withstand starting current during acceleration.



6.3 Troubleshooting

Malfunction	Possible cause	Action
	Starting time is too long.	Close choking elements, check starting torque of M_A/M_N of motor.
	Faulty drive motor.	Check motor and replace if necessary.
	Starting/re-starting when fan is hot.	Switching frequency too high, let motor run through (control via choking element).
	Starting current too high.	Wrong voltage. Provide star-delta starting, local mains not strong enough.

6.4 Queries/Spare Parts order

If you have any queries, want to order for spare parts please ensure the following details; to Reitz India Limited.

- Model No. of the fan, (Number indicated on the name plate of the fan).
- Reitz Job order No.
- Purchase order No. and date of supply.
- An exact description will allow us to help you more quickly and efficiently. Information sent out by FAX will be very much appreciated.

Reitz India is committed to provide quality after sales service at economical price by our experienced service personnel. Please contact Reitz India Ltd, for their per-diem rates for supervision of erection, commissioning and repairs.

Please contact:

Reitz India Ltd.

'Serene Towers', 8-2-623/A, Road No.10,
Banjara Hills, Hyderabad - 500 034. India

Phone: +40-2330 1888 (6 lines) **Fax:** +40-2330 8521

E-mail: reitzindia@sancharnet.in **website :** www.reitzindia.com

□ **Chennai** Ph: 093810 63065 □ **Kolkata** Ph: 093310 07535 □ **Mumbai** Ph: 093222 95348
□ **Nagpur** Ph: 093732 89475 □ **New Delhi** Ph: 098110 56425 □ **Raipur** Ph: 093002 08172